



Connecting the PDA 8G or PAX via SiteLink®

April 2015

1. Connect the Pile Driving Analyzer® model 8G or PAX to the Internet, using for example a broadband card or a cell phone; follow your local Internet Service Provider instructions to do that.
2. Start the SiteLink® program. The GRL engineer will need the SiteLink ID and password (note that password will change).
3. The GRL engineer will control the PDA from this point forward. Please wait for confirmation from the GRL engineer prior to commencing with pile driving.
4. Confirm data has been collected, saved and transferred before disconnecting the PDA from the internet.
5. Place PDA and wireless transmitters on respective chargers so they are ready for the next use.

A video demonstrating how SiteLink works is found at:

<http://www.teamviewer.com/en/help/video.aspx>

Manual on the Teamviewer software is located at:

<http://downloadus2.teamviewer.com/docs/en/v10/TeamViewer10-Manual-Remote-Control-en.pdf>